

# ***Street Magic® Spyder LED Front Turn Signal Install Instructions***

1) Remove front turn signal pods from mirror stalks as per instructions on page 108 of the owner's manual.

2) Once removed, unhook connector to detach pod from Spyder.

Pic #1

3) Plug in ***Street Magic®*** LED directional pod and reinstall into mirror stalk.

Pic #2

4) Repeat lines 1-3 for remaining directional pod.

5) For those of you who **ARE NOT** using a ***Street Magic® Triple Play Unit*** continue with line 6 below.

For those of you who **ARE** using a ***Street Magic® Triple Play Unit*** skip ahead to step 9 below.

6) Remove instrument cluster from Spyder by following instructions on page 107 of owner's manual.

Pic #3

7) Locate wires going to each directional and unplug connector.

Pic #4

8) Take connectors from *Signal Stabilizer* unit and plug in-between turn signal connectors. Repeat for remaining side. Re-install instrument cluster. Test operation.

Pics #5 and #6

9) Owners with ***Street Magic® Triple Play Units***: remove rear under-tail panel as per page 94 in owner's manual to gain access to ***Triple Play Unit***.

10) If you have a ***Triple Play Gen I Unit*** locate Signal Stabilizer connected to single black connector at rear of unit, and unhook. Replace with new dual Signal Stabilizer from turn signal kit.

Pic TP#1, TP #2 and TP#3

11) Those of you that have a newer ***Triple Play Gen II Units***, locate the two black connectors at the rear of unit and plug the additional Signal Stabilizer unit from kit into the free black connector on Signal Stabilizer unit.

Pics TP #4, TP#5 and TP#6

12) Test operation. Reinstall rear under tail cover.

Pic. # 1



Pic. # 2



Pic. # 3



# Street Magic® Spyder LED Front Turn Signal Install Instructions

Pic. # 4



Pic. # 5



Pic. # 6



## Original Triple Play Unit


Pic. # TP1



Pic. # TP2




Pic. # TP3

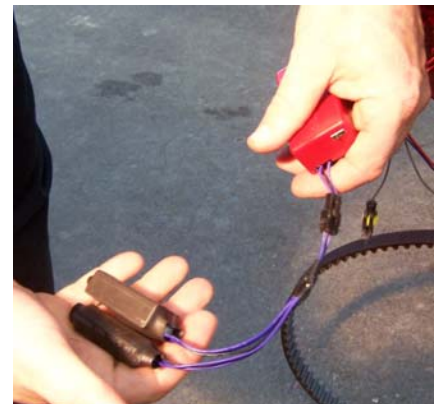


## Triple Play II Unit

Pic. # TP4

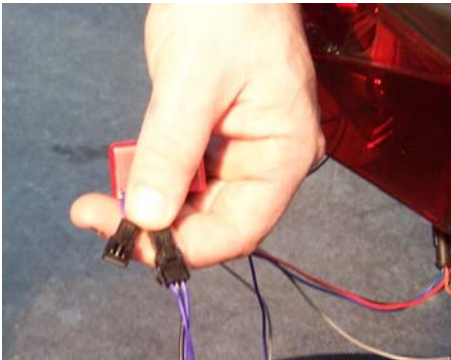

Pic. # TP5

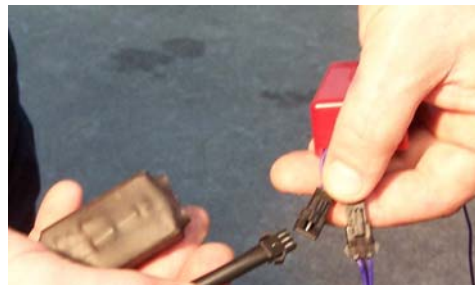

Pic. # TP6

