



## ***Street Magic*** Spyder RT TIPS Kit Install Instructions


- 1) Remove middle and top side panels from the Spyder RT by following instructions found in the owner's manual on page 118 an 119.
- 2) Locate the two pin connector for the fender tip light. This can be found on the bottom side of the upper front control arm about half way down the control arm's bottom side. (see Pic. #1)
- 3) Plug TIPS unit between these connectors using zip ties secure TIPS unit to control arm.
- 4) Route wire from TIPS unit along control arm securing with zip ties as needed until it reaches inboard end of control arm. Route wire up through openings in frame and body work until it reaches opening just below mirror mounting location.
- 5) Route wire through hole in upper body work support bracket and thread out through hole that the turn signal wires pass through.  
  
(see Pics. #2 & #3)
- 6) Using supplied **POSI-TAP** connectors tap wire from TIPS unit into power wire for turn signal. If you have any questions on how to use the **POSI-TAP** connectors please see [www.posi-lock.com](http://www.posi-lock.com) The connectors have their ports numbered and power wire will be the wire located in port #1 on the connector.
- 7) After reinstalling the body panels test operation.

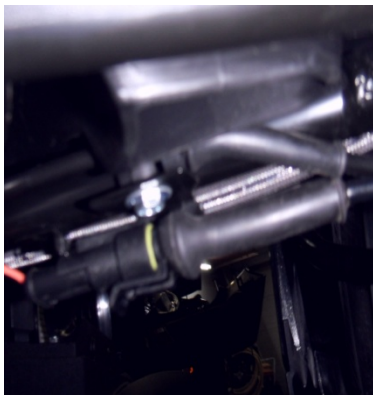

Pic #1

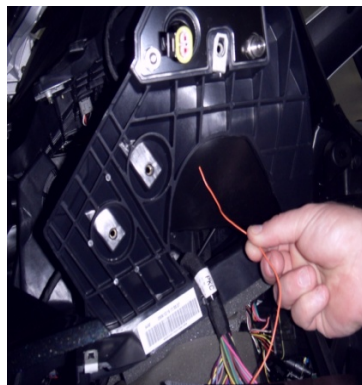

Pic #2

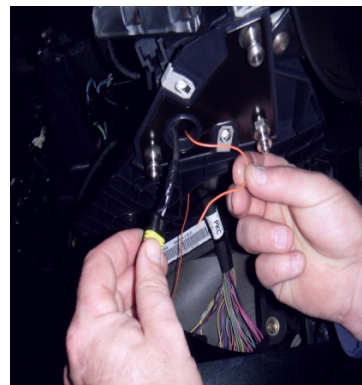

Pic #3