



SPYDER TruFLEX™ LEDs


Installation Instructions

- 1) Remove rear under-tail cover by removing the 6 torx screws holding it in place. Follow the instructions in your owner's manual under the "tail light bulb replacement" section. Leave (front left) 1 Torx screw in place to make installation easier. (See Picture #1 and #2)
- 2) Using supplied 3M primer clean surface that TruFLEX™ will be mounted to. Allow to dry 2-3 minutes.
- 3) Mount shorter TruFLEX™ on upper surface as shown. Snake wires through opening between panel and taillight as shown below. Tip: Align end cap so that it just overhangs edge of body, see close up picture below. Tip. Pull Red 3M liner off slowly while pushing and aligning TruFLEX™ to surface. (See Picture #3, #4, #5)
- 4) Mount the longer TruFLEX™ on the lower under tail surface as shown. Again, align the end cap so that is just overhangs edge of tail cover. (See Picture #6)
- 5) Next, locate and unplug the positive (colored) wire connector and ground wire (black) connector coming from the rear turn signal. (See Picture #7)
- 6) Plug in Ground (black) Male Connector from the TruFLEX™ into the Ground Female connector and plug the Ground Female Connector from the TruFLEX™ into the Ground Male connector.
- 7) Plug in Positive (color) Male Connector from the TruFLEX™ into the Positive Female connector and plug the Positive Female Connector from the TruFLEX™ into the Positive Male connector. (See Picture #8)
- 8) Repeat for opposite side.
- 9) Tie up all loose wire with enclosed tie wraps.
- 10) Reinstall under-tail cover.
- 11) Test operation in all modes.






Picture #1

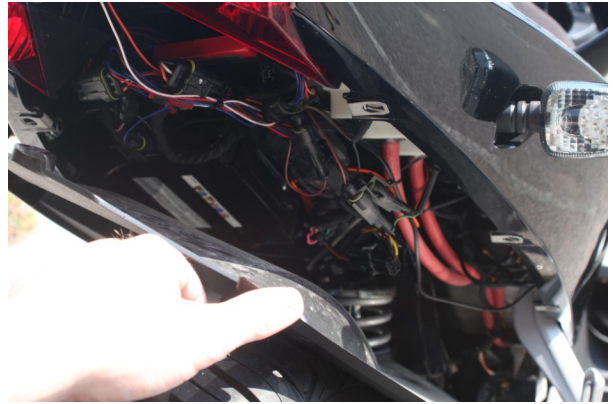

Picture #2



Picture #3

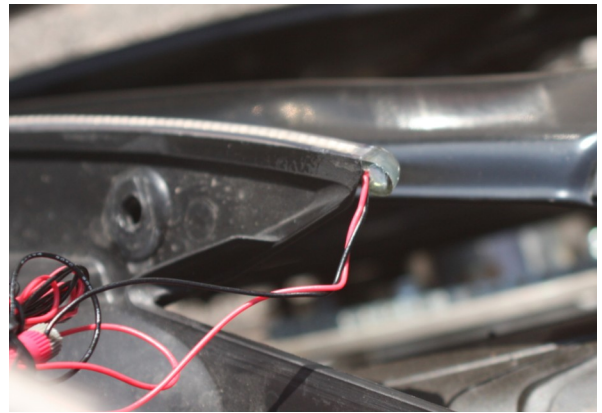

Picture #4



Picture #5



Picture #6



Picture #7



Picture #8